

Operating Equipment in Enhanced Classrooms

Use the touch-screen control panel to operate the projector and to select the components you wish to project. The four components are computer, laptop, DVD/VCR and document presenter.

Projector Power:

The projector will power on when you select the component you wish to project.

Select the desired component to project:

To project the Computer, touch PC. Turn the computer and the computer monitor on if necessary by pressing their power buttons and operate the computer as you normally would.

To project a Laptop, touch Laptop. Connect the laptop to the cable labeled laptop and operate the laptop as you normally would.

To project the DVD, touch DVD. Operate the DVD as you normally would.

To project the VCR, touch VCR. Operate the VCR as you normally would.

To project the document presenter, touch Doc Cam. Turn on the document presenter by pressing its Power button.

Volume Control:

Touch the Volume icon to raise or lower the volume.

When Finished:

Turn off the projector by pressing System Off.

Turn off the document presenter.

Turn off the DVD

Turn off the VCR

Turn off the computer monitor. You may leave the computer on.