

Operating Equipment in Enhanced Classrooms

Use the remote control for projector power and the touch-screen control panel to select the components you wish to project. The three components are computer, laptop, and document presenter.

Projector Power:

Use the REMOTE CONTROL labeled PROJECTOR – press the RED button once.

Select the desired component to project:

To project the Computer, touch PC. Turn the computer and the computer monitor on if necessary by pressing their power buttons.

To project a Laptop, touch LAPTOP. Connect the laptop to the cable labeled laptop.

To play a DVD, use the DVD drive in the computer

To project the document presenter, touch DOC CAM. Turn on the document presenter by pressing its Power button.

Volume Control:

Touch the Volume icon to raise or lower the volume.

When Finished:

Turn off the projector by pressing the RED button on the REMOTE CONTROL labeled PROJECTOR 2 times.

Turn off the document presenter.