

Operating Equipment in Enhanced Classrooms

Use the control panel to operate the projector and to select the components you wish to project. The four components are computer, DVD, VCR and document presenter.

Turn on Projector:

Press Power On

Select the desired component to project:

To **project the Computer**, press the computer button. Turn the computer and the computer monitor on if necessary by pressing their power buttons and operate the computer and you normally would.

To **project the DVD**, press the DVD button. Operate the DVD as you normally would. The VCR/DVD player functions (Play, FF, Rewind, etc) CANNOT be operated by the control panel. Please use the ZENITH REMOTE to operate the VCR/DVD player.
****You will need to select VCR on the control panel in order to project it on the screen and have the audio operate properly.*

To **project the VCR**, press the VCR button. Operate the VCR as you normally would. The VCR/DVD player functions (Play, FF, Rewind, etc) CANNOT be operated by the control panel. Please use the ZENITH REMOTE to operate the VCR/DVD player.
****You will need to select VCR on the control panel in order to project it on the screen and have the audio operate properly.*

To **project the document presenter**, press the Doc Cam button. Turn on the document presenter by pressing its Power button.

Volume Control: The volume control on the panel does not work. To adjust the volume for the VCR/DVD and computer use the knob marked MASTER on the amplifier on the bottom shelf, under the VCR/DVD player. Use the knob marked MASTER to control the volume.

When Finished:

Turn off the projector by pressing the projector off button.
Turn off the document presenter
Turn off the computer monitor. You may leave the computer on.